


Manual for Adjustable legs

Tools needed: 10mm wrench and 4mm allen wrench (for fastening lower support bar)

Adjustable legs can be used without the lower support bar with anti-slip feet or with ice spikes according to the surface. The manual for attaching anti-slip feet and lower support bar can be found on the other side of the paper.

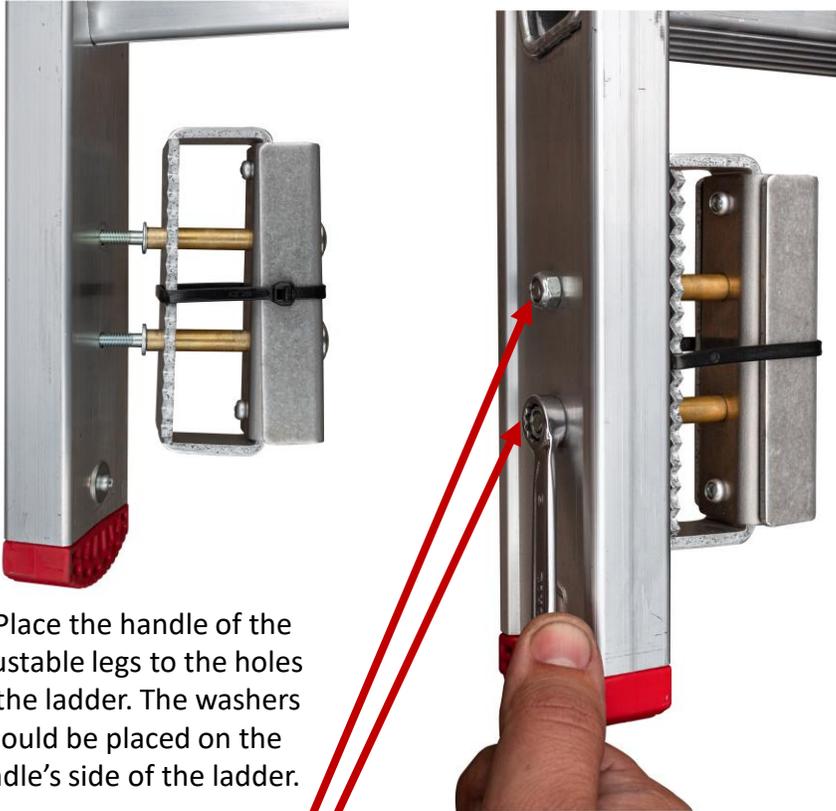

1. Place the handle of the adjustable legs to the holes on the ladder. The washers should be placed on the handle's side of the ladder.



2. Place the nuts.

3. Tighten the nut so that the outside of the nut and the end of the bolt are even.



4. Now break and remove the cable tie.



5. Squeeze the handle so that the locking part arises towards the handle, and then put the adjustable leg to its place.



On the above picture: Adjustable leg has been put in its place correctly when the ice spikes are directed towards the ground. The spikes are at an angle so that when the ladders are in the operating position, the spikes all touch the surface to give the best possible grip. This can be reviewed with the angle of the steps, as shown in the picture.



Always check before using the ladder, that adjustable legs are locked so that the handle is pushed all the way against the ladder.




Manual for attaching the lower support bar



1. Attach the fixing parts to the adjustable legs




2. Squeeze the handle so that the locking part arises towards the handle, and then put the adjustable leg to its place.

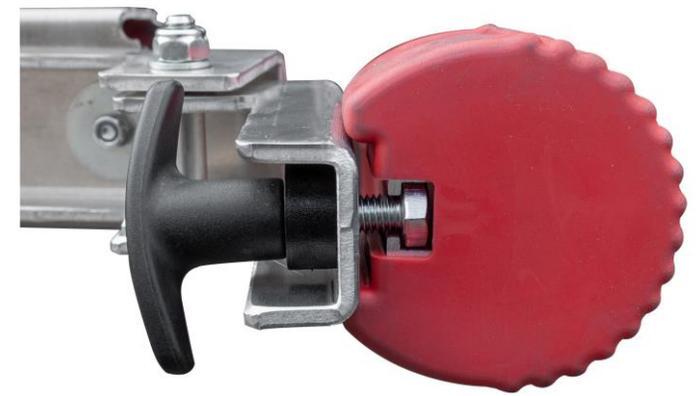

3. Put the hexagon end of the nut (M8x25) to the screw hole of the lower support bar.



Always check before using the ladder, that adjustable legs are locked so that the handle is pushed all the way against the ladder.

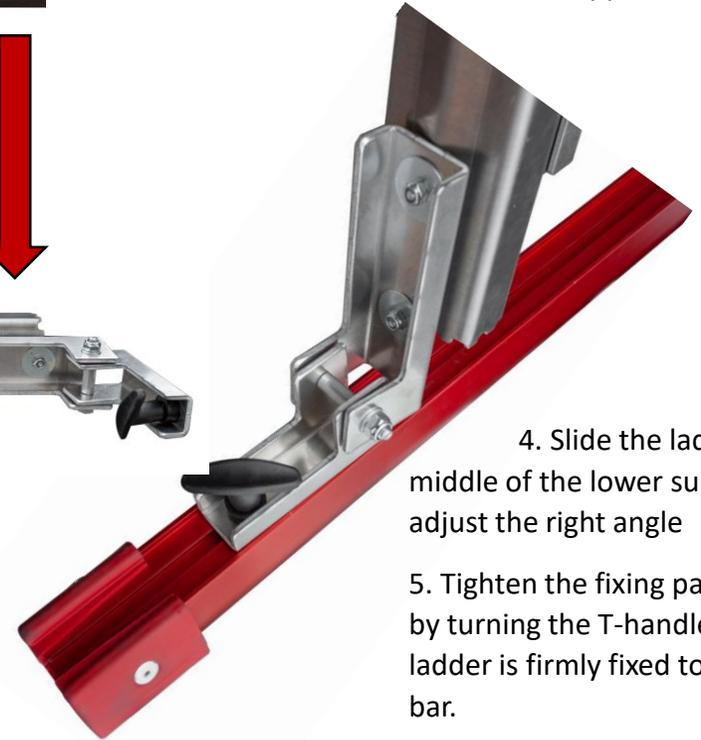


4. Slide the ladder to the middle of the lower support bar and adjust the right angle

5. Tighten the fixing parts to the bar by turning the T-handles, so that the ladder is firmly fixed to the support bar.

Always check before using the ladder, that the ladder is firmly fixed to the support bar!

Attaching the anti-slip feet to the adjusting legs.

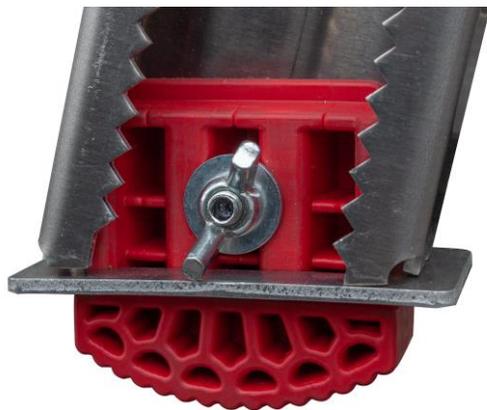

The anti-slip feet must be removed when a support bar is attached to the adjusting legs.